

AUTOGAS Refueling Nozzle ONLY

Not suitable for use with adaptors and gas canisters.



Align nozzle with Bayonet fill point. Push the nozzle onto the fill point.



Hold nozzle with one hand while rotating the connector nut 30° - 45° in a clockwise direction.



Pull lever back (A) and latch as shown (B). You can remove your hands from the nozzle.



The nozzle is safely attached. Press green START button and hold until fill is completed.



To unlatch, squeeze lever and return to rest position.

IMPORTANT NOTE:

A small volume of gas is released when you let down the lever. This is normal.

KEEP HANDS AWAY FROM CONNECTOR!



Once gas is discharged, turn connector nut anti-clockwise (A). Remove Nozzle (B). A small amount of residual gas is normal.