




Align the nozzle with the lugs of the Bayonet fill point. Push the nozzle onto the fill point until the lugs are not visible.



Hold the nozzle with one hand while rotating the connector nut 20° - 55° in a clockwise direction with the second hand.



Pull lever back (A) and latch as shown (B). The system is now secure and you can remove your hands from the nozzle.

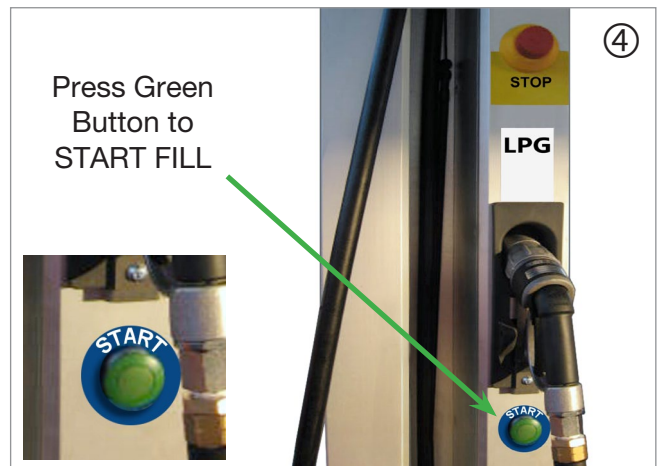

The nozzle is now safely attached to the fill point. You can leave the nozzle and press the green START button to commence refuelling.



To unlatch, squeeze lever and return to rest position. **WARNING:** A small volume of gas is released. Keep hands away from connector nut.



Once gas is discharged, turn connector nut anti-clockwise (A). Nozzle can now be removed (B). A small amount of residue gas is normal.